



# Eureka Tower

## Operation Instruction for Comelit Audio/Video Intercom System



**Entrance Panel**  
Model: 3ONE6 Touch

**Entrance Panel**

To call an apartment from an entrance panel dial the apartment number (eg: 1001) then press "Bell" button to initiate call.



**Entrance Panel**  
Model: 3ONE6 Sense

**Monitor Features:**

1. Answer Key
2. Speaker
3. Door Unlock & Lift Release Key
4. LCD Colour Touch Display
5. Microphone
6. Camera
7. Privacy Key LED
8. Message Menu Key

**Pressed** - allows access to the messages section.  
**Lit Steadily** - video memory / absent message active.  
**Flashing** - new message waiting.

9. Not Used



**Apartment Monitor**  
Model: Maxi Android 6803W

Upon receiving a call from an intercom entrance panel a ring tone will be emitted from the apartment monitor and a video image will automatically appear. You may answer the call by pressing the Answer Key "1". To grant your visitor access into the building and to your apartment floor level press the Door Unlock & Lift Release Key "3", this function will unlock the entry door for approx. 5 seconds and release the lift for approx. 180 seconds (this function will de-secure the floor selection button relevant to your floor only within the lift car).